







Attentions:

The printer should be away from the water and avoid the sunlight, glare and heat source direct exposure. Avoid any liquid, dust and metal objects into the interior of the printer.

The high environment temperature (>45°C) or the low tempe will reduce the print quality.

- 4. Don't open the cover of paper bin in printing process Using low quality or storage too long time print paper will reduce the print quality, even damage the printer.
- If there is dirt at the print head, need to use a soft cotton or cotton swab to dip alcohol and wipe it clean to prevent the print head from being worn.

Don't touch the print head and retainer directly in order to avoid damaging the print head because of static electricity.
 Don't scratch or touch the print head with a hardened object to avoid damaging the print head.

8. Please try to use up the battery before charging, which can effectively protect the battery life.

9. Please using the power supply attached to the product, or else, it maybe damage the printer or cause the charging time to extend. In the course of any accident, please disconnect the printer power supply and remove the printer battery immediately.

If user disassemble the printer, the company has the right to refuse warranty on the product.

If not to use the printer for a long time, please be sure to remove the battery from printer, and disconnect the charger's power supply.

1. Product introduction Mini-USB Port

2. Functions and features

3. Basic operation

3.1 Power on the printer In power off status, press down the "Power on/off" button and hold on 2 seconds, then the printer will beeps once and into working status, the power indicator light (red).

3.3 Print self-test page
After the user gets the printer, the printer can be self-test to detect the current settings and working status.
When the printer is power off and the print paper is leaded cornectly, greas down the "Power orioff" button and "Feed" button similarancests, when the self-test page.

3.4 Feed paper(manual)
In the normal working status, press the "Feed" button, the printer will feed paper.

3.6 Paper loading method

Open the cover of paper bin, draw out the head of paper roll, and put it into the paper bin in the direction shown below.

4.1 By Bluetooth

4.2 By USB port

Before using the USB port to printing communication, you need to use the USB cable to connect the printer and PC.

port mode need it.

The USS port working mode switching method. (1) Power off the printer and load paper correctly — (10) Press down the "Power orNott" button and Feed" button simultaneously, lossen them until the printer finished 'self-test page' printing. — (1) Press down the "Feed" button for 2 seconds again to complete the switch operation (at the bottom of the 'self-test page' wit have a corresponding description).

5. Accessories

Appendix:

The instructions of indicate light and buzzer signal

Long press "Power on/off" outton in the power on statu

Indicator light	Indicator status	Printer status
Power indicator (Red)	ON	Power on status
	OFF	Power off status
	Flash	Standby status
Bluetooth indicator (Blue)	OFF	Bluetooth disconnected
	ON	Bluetooth connected
Out of paper indicator (Blue)	ON	Out of paper
	OFF	Enough paper
Battery charging indicator (Green)	Flash (Power on status)	Charging
	ON (Power off status)	Charging
	OFF	Battery power is full
Operation	Printer's action	Buzzer's action

Contents of this manual without the permission of the company shall be free to change and replication, we reserve the right to change the product, if user needs the product further information can contact directly with the supplier.

ZA Bernard Moulinet - 24700 Montpon-Ménestérol - France +33 (0)5 53 80 85 00 services@sauermanngroup.com



o c\ Resina 22-24 Nave 10-B. 28021 Madrid. Spain

\(+34 917 230 930 www.gavasa.com